



CYBEX GmbH

Riedinger Str. 18 | 95448 Bayreuth | Germany

info@cybex-online.com

www.cybex-online.com

www.facebook.com/cybex.online



GO TO WWW.CYBEX-ONLINE.COM
TO WATCH AN INSTRUCTIONAL VIDEO



CYBEX PALLAS M
ECE R44/04, Gr. 1 | 9-18 kg




CYBEX SOLUTION M
ECE R44/04, Gr. 2-3 | 15-36 kg

PALLAS M USER GUIDE

EN – Brief instructions Group 1 (9-18 kg)
EE – Brief instructions Group 1 (9-18 kg)
TR – Brief instructions Group 1 (9-18 kg)

| RU – Brief instructions Group 1 (9-18 kg)
| LV – Brief instructions Group 1 (9-18 kg)

| UA – Brief instructions Group 1 (9-18 kg)
| LT – Brief instructions Group 1 (9-18 kg)

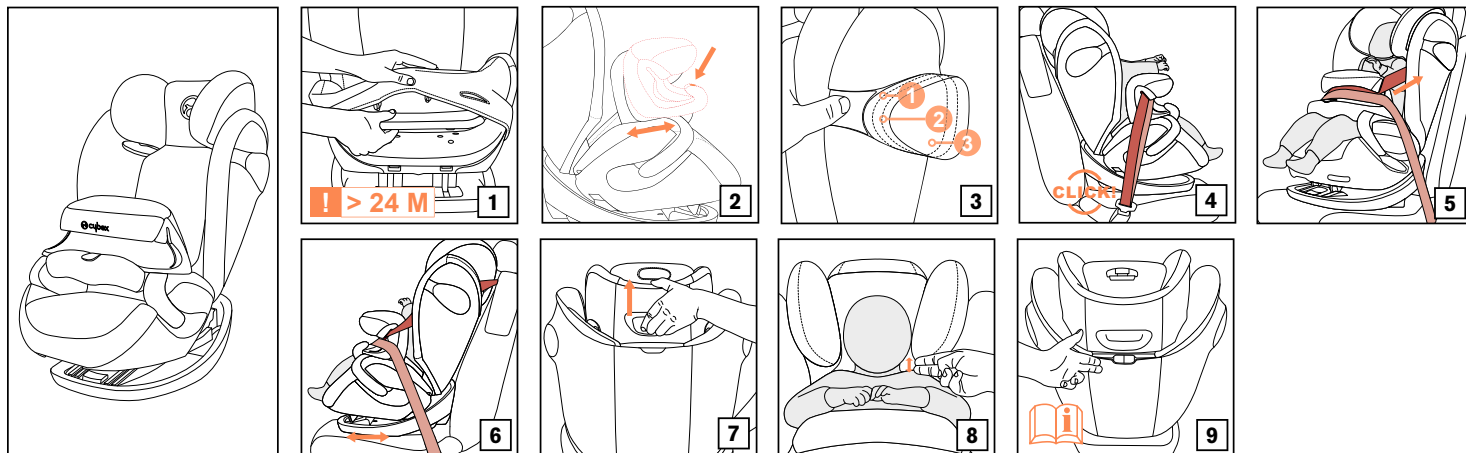

EN

WARNING! Without the approval of the certification office, the child car seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child car seat no longer being guaranteed.

RU

WARNING! The child car seat only offers optimum protection for your child if you follow the usage instructions precisely.

WARNING! Without the approval of the certification office, the child car seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child car seat no longer being guaranteed.

UA

WARNING! The child car seat only offers optimum protection for your child if you follow the usage instructions precisely.

WARNING! Without the approval of the certification office, the child car seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child car seat no longer being guaranteed.

EE

WARNING! The child car seat only offers optimum protection for your child if you follow the usage instructions precisely.


WARNING! Without the approval of the certification office, the child car seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child car seat no longer being guaranteed.

WARNING! The child car seat only offers optimum protection for your child if you follow the usage instructions precisely.

EN – Brief instructions Group 2/3 (15-36 kg)
EE – Brief instructions Group 2/3 (15-36 kg)
TR – Brief instructions Group 2/3 (15-36 kg)

| RU – Brief instructions Group 2/3 (15-36 kg)
| LV – Brief instructions Group 2/3 (15-36 kg)

| UA – Brief instructions Group 2/3 (15-36 kg)
| LT – Brief instructions Group 2/3 (15-36 kg)

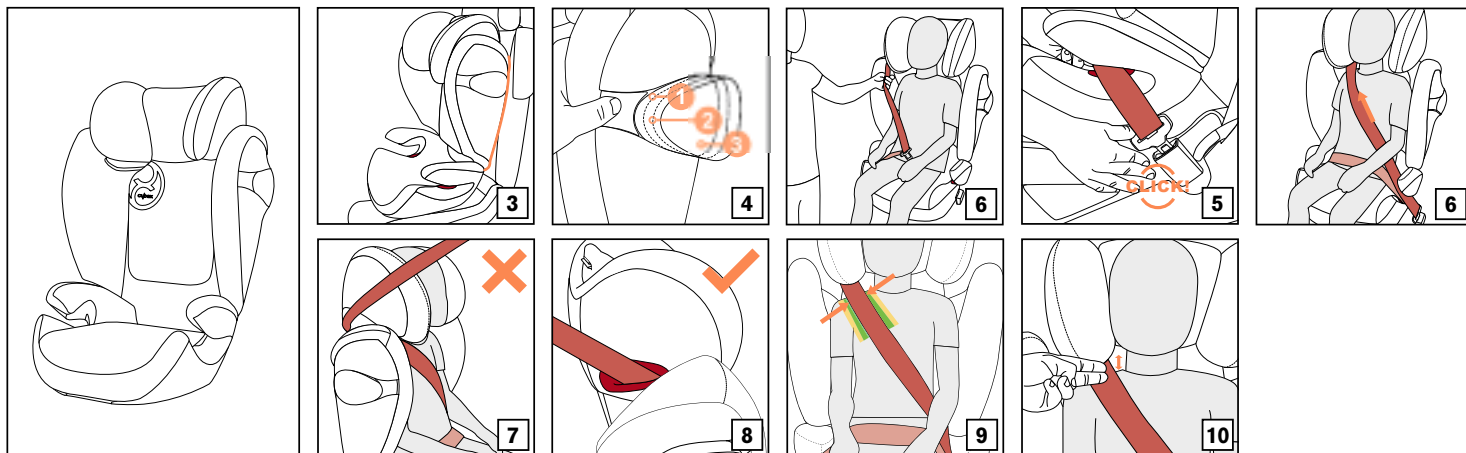

LV

WARNING! Without the approval of the certification office, the child car seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child car seat no longer being guaranteed.

WARNING! The child car seat only offers optimum protection for your child if you follow the usage instructions precisely.

LT

WARNING! Without the approval of the certification office, the child car seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child car seat no longer being guaranteed.

WARNING! The child car seat only offers optimum protection for your child if you follow the usage instructions precisely.

TR

WARNING! Without the approval of the certification office, the child car seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child car seat no longer being guaranteed.

WARNING! The child car seat only offers optimum protection for your child if you follow the usage instructions precisely.

Dear customer,

Thank you for choosing the CYBEX PALLAS M child car seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX PALLAS M child car seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.

Dear customer,

Thank you for choosing the CYBEX PALLAS M child car seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX PALLAS M child car seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.

Dear customer,

Thank you for choosing the CYBEX PALLAS M child car seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX PALLAS M child car seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.



Certification

CYBEX PALLAS M

Seat elevator with backrest and headrest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard

ECE R-44/04,

CYBEX PALLAS M - group 1, 9 to 18 kg

CYBEX SOLUTION M - group 2/3, 15 to 36 kg

Certification

CYBEX PALLAS M

Seat elevator with backrest and headrest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard

ECE R-44/04,

CYBEX PALLAS M - group 1, 9 to 18 kg

CYBEX SOLUTION M - group 2/3, 15 to 36 kg

Certification

CYBEX PALLAS M

Seat elevator with backrest and headrest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard

ECE R-44/04,

CYBEX PALLAS M - group 1, 9 to 18 kg

CYBEX SOLUTION M - group 2/3, 15 to 36 kg

EN

Contents

WARNING! To ensure optimum protection for your child, the CYBEX PALLAS M must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the backrest).

Note! Country-specific regulations (e.g. regarding colour-coding on child car seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg).....	2
Brief instructions Group 2/3 (15-36 kg).....	3
Certification	6
Positioning the seat correctly in the vehicle	8
Activating the L.S.P.....	10
Placing the seat in the vehicle	10
Adapting to body size	12
Removing the additional seat insert.....	12
Adjusting the safety cushion – ECE group 1 (9-18 kg)	12
Seated and lying position – ECE group 1 (9-18 kg).....	14
Reclining headrest	14
Securing the child with the safety cushion – ECE group 1 (9-18 kg)	16
Switching from PALLAS M to SOLUTION M (ECE group 1 to ECE group 2/3)	16
Securing the child without the safety cushion – ECE group 2/3 (15-36 kg).....	18
Is your child correctly secured?.....	20
Care & maintenance.....	20
Removing the seat cover	22
Removing the cover from the headrest flap	22
Removing the cover from the head support	22
Removing the cover from the shoulder part	22
Removing the cover from the booster	24
Removing the cover from the safety cushion	24
Cleaning.....	24
How to act following an accident.....	26
Product service life	26
Disposal	26
Warranty conditions.....	28

RU

Contents

UA

Contents

WARNING! To ensure optimum protection for your child, the CYBEX PALLAS M must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the backrest).

Note! Country-specific regulations (e.g. regarding colour-coding on child car seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.



Brief instructions Group 1 (9-18 kg).....	2
Brief instructions Group 2/3 (15-36 kg).....	3
Certification	6
Positioning the seat correctly in the vehicle	9
Activating the L.S.P.....	11
Placing the seat in the vehicle	11
Adapting to body size	13
Removing the additional seat insert.....	13
Adjusting the safety cushion – ECE group 1 (9-18 kg)	13
Seated and lying position – ECE group 1 (9-18 kg).....	15
Reclining headrest	15
Securing the child with the safety cushion – ECE group 1 (9-18 kg)	17
Switching from PALLAS M to SOLUTION M (ECE group 1 to ECE group 2/3)	17
Securing the child without the safety cushion – ECE group 2/3 (15-36 kg).....	19
Is your child correctly secured?.....	21
Care & maintenance.....	21
Removing the seat cover	23
Removing the cover from the headrest flap	23
Removing the cover from the head support	23
Removing the cover from the shoulder part	23
Removing the cover from the booster	25
Removing the cover from the safety cushion	25
Cleaning.....	25
How to act following an accident.....	27
Product service life	27
Disposal	27
Warranty conditions.....	29

WARNING! To ensure optimum protection for your child, the CYBEX PALLAS M must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the backrest).

Note! Country-specific regulations (e.g. regarding colour-coding on child car seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg).....	2
Brief instructions Group 2/3 (15-36 kg).....	3
Certification	6
Positioning the seat correctly in the vehicle	9
Activating the L.S.P.....	11
Placing the seat in the vehicle	11
Adapting to body size	13
Removing the additional seat insert.....	13
Adjusting the safety cushion – ECE group 1 (9-18 kg)	13
Seated and lying position – ECE group 1 (9-18 kg).....	15
Reclining headrest	15
Securing the child with the safety cushion – ECE group 1 (9-18 kg)	17
Switching from PALLAS M to SOLUTION M (ECE group 1 to ECE group 2/3)	17
Securing the child without the safety cushion – ECE group 2/3 (15-36 kg).....	19
Is your child correctly secured?.....	21
Care & maintenance.....	21
Removing the seat cover	23
Removing the cover from the headrest flap	23
Removing the cover from the head support	23
Removing the cover from the shoulder part	23
Removing the cover from the booster	25
Removing the cover from the safety cushion	25
Cleaning.....	25
How to act following an accident.....	27
Product service life	27
Disposal	27
Warranty conditions.....	29

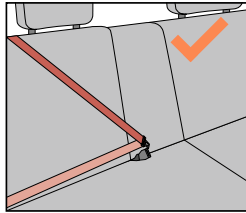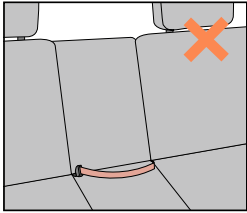

POSITIONING THE SEAT CORRECTLY IN THE VEHICLE


The CYBEX PALLAS M-FIX/PALLAS M with retracted ISOFIX Connect system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.

- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child car seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at a recline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child car seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

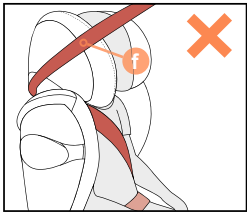

WARNING! The child car seat may not be used on car seats facing to the side of the direction of travel. Use of the child car seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle headrest must not be removed when fitting on a rear-facing seat! Even if not in use, the child car seat must always be secured with the safety belt. This applies even if the child seat has already been secured to the vehicle using the ISOFIX Connect system. An unsecured child car seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.



POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-FIX/PALLAS M with retracted ISOFIX Connect system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.

- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child car seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at a recline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child car seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

WARNING! The child car seat may not be used on car seats facing to the side of the direction of travel. Use of the child car seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle headrest must not be removed when fitting on a rear-facing seat! Even if not in use, the child car seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX Connect system. An unsecured child car seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.



POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-FIX/PALLAS M with retracted ISOFIX Connect system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.






- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child car seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at a recline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child car seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

WARNING! The child car seat may not be used on car seats facing to the side of the direction of travel. Use of the child car seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle headrest must not be removed when fitting on a rear-facing seat! Even if not in use, the child car seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX Connect system. An unsecured child car seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.

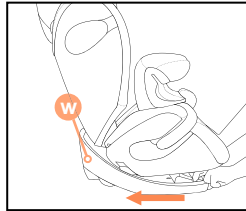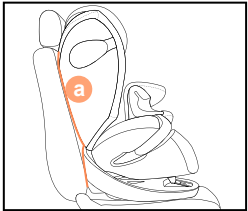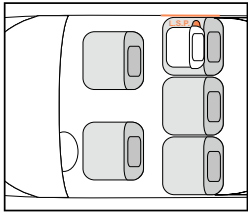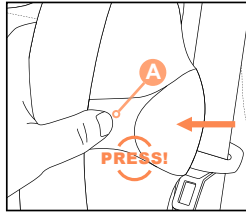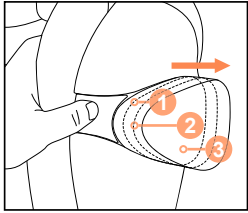

ACTIVATING THE L.S.P.

The “Linear Side-impact Protection” system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door.

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

PLACING THE SEAT IN THE VEHICLE

Place the child car seat on the appropriate seat in the car.

- Always ensure that the entire surface of the backrest (a) of the CYBEX PALLAS M is placed fully against the backrest of the vehicle seat. The child car seat must never be in a lying position.
- If the headrest of the vehicle is in the way, pull it out all the way, turn it away or remove it completely (for exceptions to this, please refer to the section “POSITIONING THE SEAT CORRECTLY IN THE VEHICLE”) The backrest (a) will perfectly adapt to practically any recline of the vehicle seat.

WARNING! The full surface of the backrest of the CYBEX child car seat must be against the backrest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child car seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer in this connection to our cleaning advises in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

ACTIVATING THE L.S.P.

The “Linear Side-impact Protection” system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door.

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

PLACING THE SEAT IN THE VEHICLE

Place the child car seat on the appropriate seat in the car.

- Always ensure that the entire surface of the backrest (a) of the CYBEX PALLAS M is placed fully against the backrest of the vehicle seat. The child car seat must never be in a lying position.
- If the headrest of the vehicle is in the way, pull it out all the way, turn it away or remove it completely (for exceptions to this, please refer to the section “POSITIONING THE SEAT CORRECTLY IN THE VEHICLE”) The backrest (a) will perfectly adapt to practically any recline of the vehicle seat.

WARNING! The full surface of the backrest of the CYBEX child car seat must be against the backrest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child car seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer in this connection to our cleaning advises in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

ACTIVATING THE L.S.P.

The “Linear Side-impact Protection” system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door.

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.



PLACING THE SEAT IN THE VEHICLE

Place the child car seat on the appropriate seat in the car.

- Always ensure that the entire surface of the backrest (a) of the CYBEX PALLAS M is placed fully against the backrest of the vehicle seat. The child car seat must never be in a lying position.
- If the headrest of the vehicle is in the way, pull it out all the way, turn it away or remove it completely (for exceptions to this, please refer to the section “POSITIONING THE SEAT CORRECTLY IN THE VEHICLE”) The backrest (a) will perfectly adapt to practically any recline of the vehicle seat.

WARNING! The full surface of the backrest of the CYBEX child car seat must be against the backrest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child car seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer in this connection to our cleaning advises in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

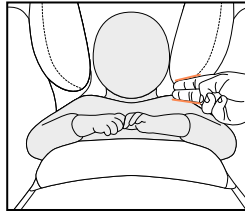
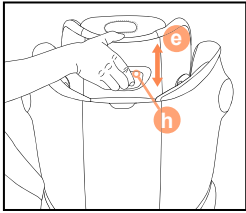


ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months.
- From the age of 25 months, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable headrest (e). To do this, pull the adjustment level (h) upwards to unlock the headrest (e).
- Adjust it so that there is space for two fingers between the lower edge of the headrest (e) and the shoulder of the child.

Note! Only an optimally adjusted headrest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M can be adjusted to one of twelve positions.

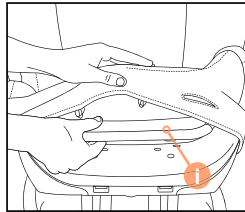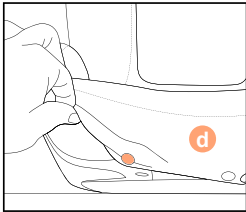

REMOVING THE ADDITIONAL SEAT INSERT

1. Release the front push buttons of the seat cover from the seat cushion (d).
2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
3. The seat insert must be removed in accordance with the age specifications stated above.
4. Restore the seat insert to its original state and fix it in place again.


ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and booster (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it rests against the child without pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

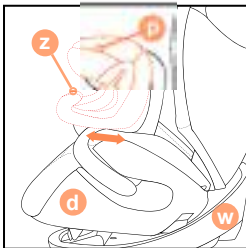

ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months.
- From the age of 25 months, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable headrest (e). To do this, pull the adjustment level (h) upwards to unlock the headrest (e).
- Adjust it so that there is space for two fingers between the lower edge of the headrest (e) and the shoulder of the child.

Note! Only an optimally adjusted headrest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M can be adjusted to one of twelve positions.

REMOVING THE ADDITIONAL SEAT INSERT

1. Release the front push buttons of the seat cover from the seat cushion (d).
2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
3. The seat insert must be removed in accordance with the age specifications stated above.
4. Restore the seat insert to its original state and fix it in place again.

ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and booster (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it rests against the child without pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months.
- From the age of 25 months, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable headrest (e). To do this, pull the adjustment level (h) upwards to unlock the headrest (e).
- Adjust it so that there is space for two fingers between the lower edge of the headrest (e) and the shoulder of the child.

Note! Only an optimally adjusted headrest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M can be adjusted to one of twelve positions.

REMOVING THE ADDITIONAL SEAT INSERT

1. Release the front push buttons of the seat cover from the seat cushion (d).
2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
3. The seat insert must be removed in accordance with the age specifications stated above.
4. Restore the seat insert to its original state and fix it in place again.



ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and booster (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it rests against the child without pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

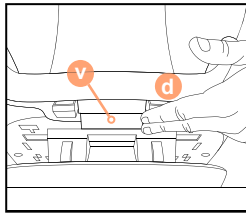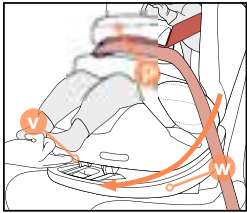

SEATED AND LYING POSITION – ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M to a lying position, the vehicle's own belt system does not need to be opened.

- If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

- To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child car seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.





RECLINING HEADREST

The reclining headrest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the headrest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the reclining headrest (r), as this is the only way that the headrest can provide optimum protection in case of side collisions.

The recline angle of the headrest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the headrest pulled back.

WARNING! Never block the locking mechanism (t) ! In the event of an accident, the recline adjustment mechanism must move smoothly, or else your child may be injured!

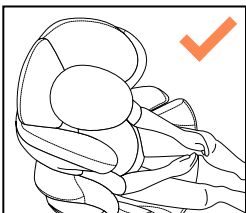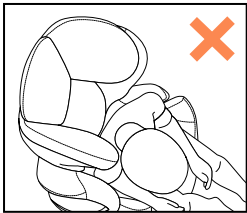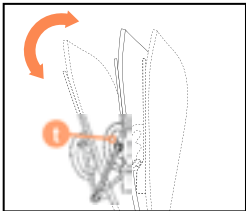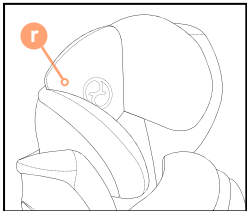

SEATED AND LYING POSITION – ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M to a lying position, the vehicle's own belt system does not need to be opened.

- If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

- To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child car seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

RECLINING HEADREST

The reclining headrest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the headrest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the reclining headrest (r), as this is the only way that the headrest can provide optimum protection in case of side collisions.

The recline angle of the headrest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the headrest pulled back.

WARNING! Never block the locking mechanism (t) ! In the event of an accident, the recline adjustment mechanism must move smoothly, or else your child may be injured!

SEATED AND LYING POSITION – ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M to a lying position, the vehicle's own belt system does not need to be opened.

- If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

- To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child car seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.









RECLINING HEADREST

The reclining headrest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the headrest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the reclining headrest (r), as this is the only way that the headrest can provide optimum protection in case of side collisions.

The recline angle of the headrest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the headrest pulled back.

WARNING! Never block the locking mechanism (t) ! In the event of an accident, the recline adjustment mechanism must move smoothly, or else your child may be injured!

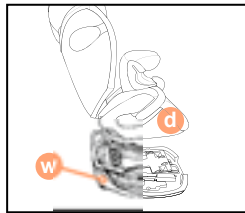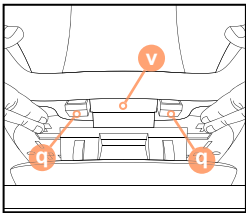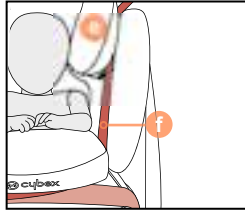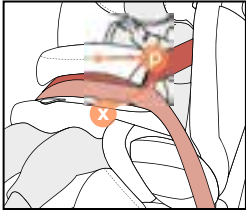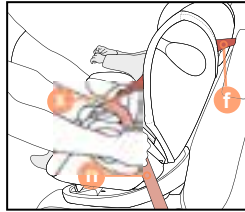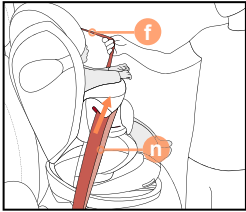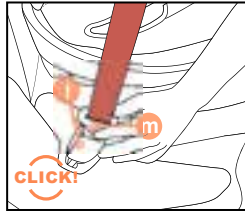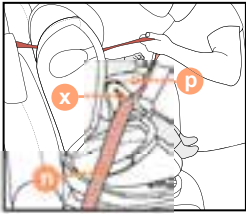

SECURING THE CHILD WITH THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

1. Now insert the previously adjusted safety cushion (p) (refer to the section “ADJUSTING THE SAFETY CUSHION”).
2. Pull out the entire length of the vehicle’s three-point belt. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child car seat.

3. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
4. Tighten the lap belt (n) by pulling the diagonal belt (f).
5. Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
7. Now feed the diagonal belt (f) tightly through the belt guide (x) of the safety cushion (p) until it is clamped inside the belt guide. Then put the diagonal belt between headrest (e) and shoulder rest. The diagonal belt does not need to be guided through the headrest belt guide for group 2/3.

SWITCHING FROM PALLAS M TO SOLUTION M (ECE GROUP 1 TO ECE GROUP 2/3)

1. Remove the safety cushion (p).
2. Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

SECURING THE CHILD WITH THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

1. Now insert the previously adjusted safety cushion (p) (refer to the section “ADJUSTING THE SAFETY CUSHION”).
2. Pull out the entire length of the vehicle’s three-point belt. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child car seat.

3. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
4. Tighten the lap belt (n) by pulling the diagonal belt (f).
5. Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
7. Now feed the diagonal belt (f) tightly through the belt guide (x) of the safety cushion (p) until it is clamped inside the belt guide. Then put the diagonal belt between headrest (e) and shoulder rest. The diagonal belt does not need to be guided through the headrest belt guide for group 2/3.

SWITCHING FROM PALLAS M TO SOLUTION M (ECE GROUP 1 TO ECE GROUP 2/3)

1. Remove the safety cushion (p).
2. Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

SECURING THE CHILD WITH THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

1. Now insert the previously adjusted safety cushion (p) (refer to the section “ADJUSTING THE SAFETY CUSHION”).
2. Pull out the entire length of the vehicle’s three-point belt. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child car seat.








3. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
4. Tighten the lap belt (n) by pulling the diagonal belt (f).
5. Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
7. Now feed the diagonal belt (f) tightly through the belt guide (x) of the safety cushion (p) until it is clamped inside the belt guide. Then put the diagonal belt between headrest (e) and shoulder rest. The diagonal belt does not need to be guided through the headrest belt guide for group 2/3.

SWITCHING FROM PALLAS M TO SOLUTION M (ECE GROUP 1 TO ECE GROUP 2/3)

1. Remove the safety cushion (p).
2. Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

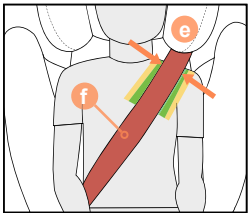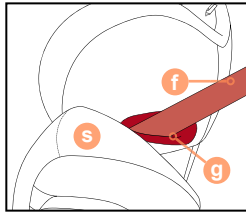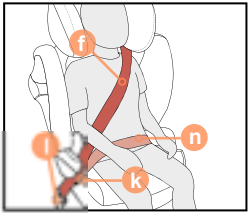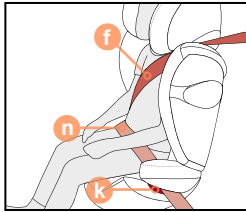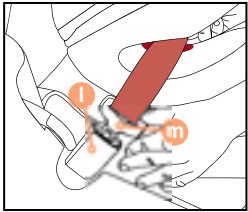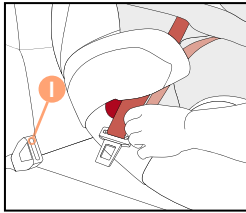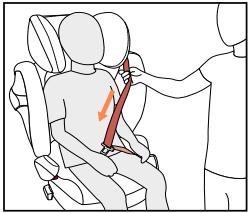

SECURING THE CHILD WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

1. Place your child in the child car seat. Pull the three-point belt right out and feed it along the belt buckle (l) in front of your child.

WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
3. Next, place the lap belt (n) in the lower belt guides (k) of the child car seat.
4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (l) must never cross the arm rest. If the belt system is too long, the child car seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the headrest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the headrest to change the position of the belt. The height of the headrest (e) can still be adjusted while in the car.

SECURING THE CHILD WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

1. Place your child in the child car seat. Pull the three-point belt right out and feed it along the belt buckle (l) in front of your child.

WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
3. Next, place the lap belt (n) in the lower belt guides (k) of the child car seat.
4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (l) must never cross the arm rest. If the belt system is too long, the child car seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the headrest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the headrest to change the position of the belt. The height of the headrest (e) can still be adjusted while in the car.

SECURING THE CHILD WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

1. Place your child in the child car seat. Pull the three-point belt right out and feed it along the belt buckle (l) in front of your child.

WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
3. Next, place the lap belt (n) in the lower belt guides (k) of the child car seat.
4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (l) must never cross the arm rest. If the belt system is too long, the child car seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.


5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the headrest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the headrest to change the position of the belt. The height of the headrest (e) can still be adjusted while in the car.

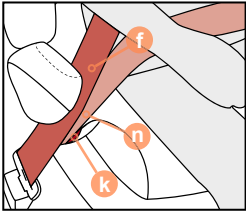

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that

- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at a recline backwards.
- the entire belt is tightly against your child's body and is not twisted.

CARE & MAINTENANCE

To ensure that your child car seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child car seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child car seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child car seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that

- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at a recline backwards.
- the entire belt is tightly against your child's body and is not twisted.

CARE & MAINTENANCE

To ensure that your child car seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child car seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child car seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child car seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that









- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at a recline backwards.
- the entire belt is tightly against your child's body and is not twisted.

CARE & MAINTENANCE

To ensure that your child car seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child car seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child car seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child car seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

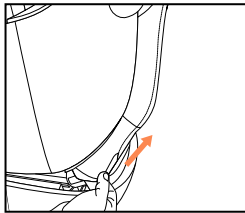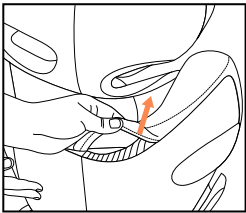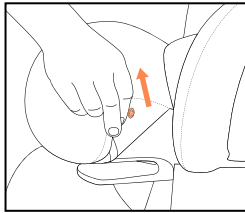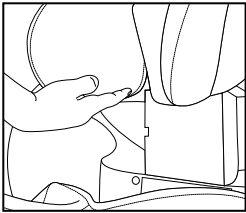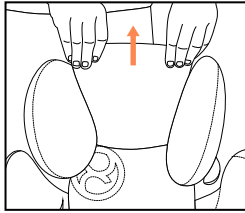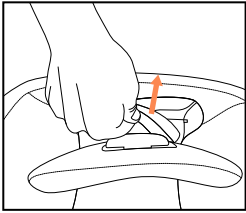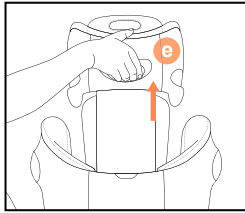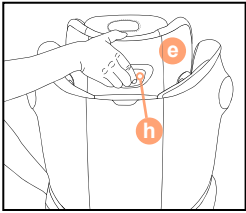

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

WARNING! The child car seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

WARNING! The child car seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

WARNING! The child car seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP





Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

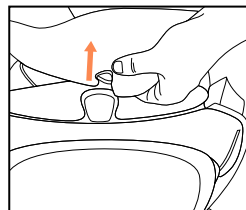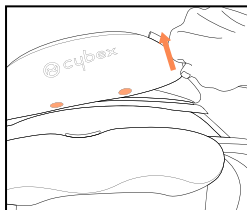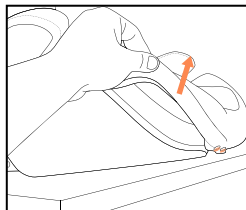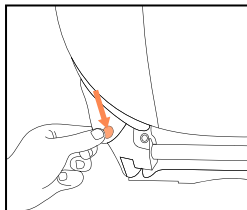


REMOVING THE COVER FROM THE BOOSTER

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

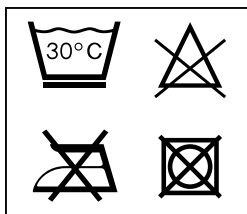

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

WARNING! Never use harsh cleaning agents or bleaches!

REMOVING THE COVER FROM THE BOOSTER

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE BOOSTER

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

WARNING! Never use harsh cleaning agents or bleaches!

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

WARNING! Never use harsh cleaning agents or bleaches!

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child car seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child car seat must be removed from the vehicle or covered with a light cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child car seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child car seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child car seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child car seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child car seat must be removed from the vehicle or covered with a light cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child car seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child car seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child car seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child car seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child car seat must be removed from the vehicle or covered with a light cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child car seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child car seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child car seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies if the product was checked for completeness, manufacturing defects and material defects immediately upon purchase. If the product was purchased by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that originally sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

CYBEX GmbH

Riedinger Str. 18, 95448 Bayreuth, Germany
Tel.: 0921 78 511-511, Fax.: 0921 78 511- 888

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies if the product was checked for completeness, manufacturing defects and material defects immediately upon purchase. If the product was purchased by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that originally sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

CYBEX GmbH

Riedinger Str. 18, 95448 Bayreuth, Germany
Tel.: 0921 78 511-511, Fax.: 0921 78 511- 888

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies if the product was checked for completeness, manufacturing defects and material defects immediately upon purchase. If the product was purchased by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that originally sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

CYBEX GmbH

Riedinger Str. 18, 95448 Bayreuth, Germany
Tel.: 0921 78 511-511, Fax.: 0921 78 511- 888

Dear customer,

Thank you for choosing the CYBEX PALLAS M child car seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX PALLAS M child car seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.

Dear customer,

Thank you for choosing the CYBEX PALLAS M child car seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX PALLAS M child car seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.

Dear customer,

Thank you for choosing the CYBEX PALLAS M child car seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX PALLAS M child car seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.



Certification

CYBEX PALLAS M

Seat elevator with backrest and headrest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard

ECE R-44/04,

CYBEX PALLAS M - group 1, 9 to 18 kg

CYBEX SOLUTION M - group 2/3, 15 to 36 kg

Certification

CYBEX PALLAS M

Seat elevator with backrest and headrest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard

ECE R-44/04,

CYBEX PALLAS M - group 1, 9 to 18 kg

CYBEX SOLUTION M - group 2/3, 15 to 36 kg

Certification

CYBEX PALLAS M

Seat elevator with backrest and headrest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard

ECE R-44/04,

CYBEX PALLAS M - group 1, 9 to 18 kg

CYBEX SOLUTION M - group 2/3, 15 to 36 kg

EE

Contents

WARNING! To ensure optimum protection for your child, the CYBEX PALLAS M must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the backrest).

Note! Country-specific regulations (e.g. regarding colour-coding on child car seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg).....	2
Brief instructions Group 2/3 (15-36 kg).....	3
Certification	32
Positioning the seat correctly in the vehicle	34
Activating the L.S.P.....	36
Placing the seat in the vehicle	36
Adapting to body size	38
Removing the additional seat insert.....	38
Adjusting the safety cushion – ECE group 1 (9-18 kg)	38
Seated and lying position – ECE group 1 (9-18 kg).....	40
Reclining headrest	40
Securing the child with the safety cushion – ECE group 1 (9-18 kg)	42
Switching from PALLAS M to SOLUTION M (ECE group 1 to ECE group 2/3)	42
Securing the child without the safety cushion – ECE group 2/3 (15-36 kg).....	44
Is your child correctly secured?.....	46
Care & maintenance.....	46
Removing the seat cover	48
Removing the cover from the headrest flap	48
Removing the cover from the head support	48
Removing the cover from the shoulder part	48
Removing the cover from the booster	50
Removing the cover from the safety cushion	50
Cleaning.....	50
How to act following an accident.....	52
Product service life	52
Disposal	52
Warranty conditions.....	54

LV

Contents

LT

Contents

WARNING! To ensure optimum protection for your child, the CYBEX PALLAS M must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the backrest).

Note! Country-specific regulations (e.g. regarding colour-coding on child car seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg).....	2
Brief instructions Group 2/3 (15-36 kg).....	3
Certification	32
Positioning the seat correctly in the vehicle	35
Activating the L.S.P.....	37
Placing the seat in the vehicle	37
Adapting to body size	39
Removing the additional seat insert.....	39
Adjusting the safety cushion – ECE group 1 (9-18 kg)	39
Seated and lying position – ECE group 1 (9-18 kg).....	41
Reclining headrest	41
Securing the child with the safety cushion – ECE group 1 (9-18 kg)	43
Switching from PALLAS M to SOLUTION M (ECE group 1 to ECE group 2/3)	43
Securing the child without the safety cushion – ECE group 2/3 (15-36 kg).....	45
Is your child correctly secured?.....	47
Care & maintenance.....	47
Removing the seat cover	49
Removing the cover from the headrest flap	49
Removing the cover from the head support	49
Removing the cover from the shoulder part	49
Removing the cover from the booster	51
Removing the cover from the safety cushion	51
Cleaning.....	51
How to act following an accident.....	53
Product service life	53
Disposal	53
Warranty conditions.....	55

WARNING! To ensure optimum protection for your child, the CYBEX PALLAS M must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the backrest).



Note! Country-specific regulations (e.g. regarding colour-coding on child car seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg).....	2
Brief instructions Group 2/3 (15-36 kg).....	3
Certification	32
Positioning the seat correctly in the vehicle	35
Activating the L.S.P.....	37
Placing the seat in the vehicle	37
Adapting to body size	39
Removing the additional seat insert.....	39
Adjusting the safety cushion – ECE group 1 (9-18 kg)	39
Seated and lying position – ECE group 1 (9-18 kg).....	41
Reclining headrest	41
Securing the child with the safety cushion – ECE group 1 (9-18 kg)	43
Switching from PALLAS M to SOLUTION M (ECE group 1 to ECE group 2/3)	43
Securing the child without the safety cushion – ECE group 2/3 (15-36 kg).....	45
Is your child correctly secured?.....	47
Care & maintenance.....	47
Removing the seat cover	49
Removing the cover from the headrest flap	49
Removing the cover from the head support	49
Removing the cover from the shoulder part	49
Removing the cover from the booster	51
Removing the cover from the safety cushion	51
Cleaning.....	51
How to act following an accident.....	53
Product service life	53
Disposal	53
Warranty conditions.....	55

EE

LV

LT

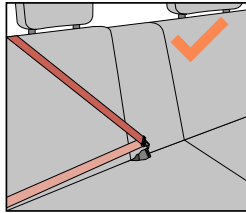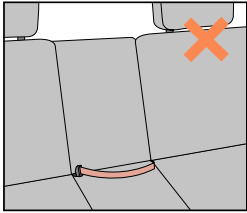

POSITIONING THE SEAT CORRECTLY IN THE VEHICLE



The CYBEX PALLAS M-FIX/PALLAS M with retracted ISOFIX Connect system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.

- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child car seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at a recline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child car seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

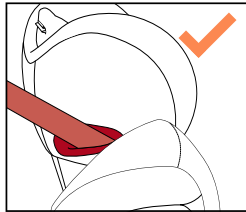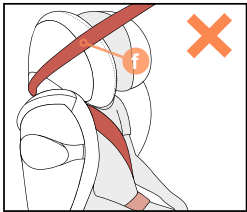

WARNING! The child car seat may not be used on car seats facing to the side of the direction of travel. Use of the child car seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle headrest must not be removed when fitting on a rear-facing seat! Even if not in use, the child car seat must always be secured with the safety belt. This applies even if the child seat has already been secured to the vehicle using the ISOFIX Connect system. An unsecured child car seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.



POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-FIX/PALLAS M with retracted ISOFIX Connect system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.

- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child car seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at a recline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child car seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

WARNING! The child car seat may not be used on car seats facing to the side of the direction of travel. Use of the child car seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle headrest must not be removed when fitting on a rear-facing seat! Even if not in use, the child car seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX Connect system. An unsecured child car seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.



POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-FIX/PALLAS M with retracted ISOFIX Connect system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.






- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child car seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at a recline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child car seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

WARNING! The child car seat may not be used on car seats facing to the side of the direction of travel. Use of the child car seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle headrest must not be removed when fitting on a rear-facing seat! Even if not in use, the child car seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX Connect system. An unsecured child car seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.

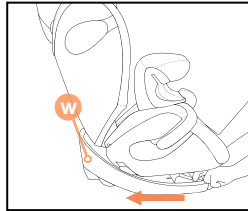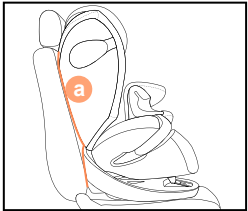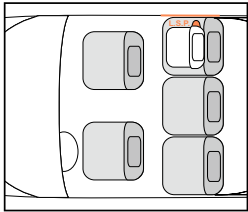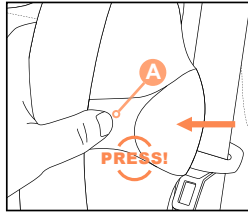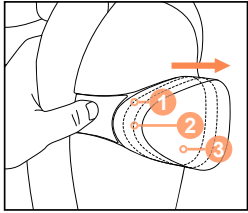

ACTIVATING THE L.S.P.

The “Linear Side-impact Protection” system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door.

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

PLACING THE SEAT IN THE VEHICLE

Place the child car seat on the appropriate seat in the car.

- Always ensure that the entire surface of the backrest (a) of the CYBEX PALLAS M is placed fully against the backrest of the vehicle seat. The child car seat must never be in a lying position.
- If the headrest of the vehicle is in the way, pull it out all the way, turn it away or remove it completely (for exceptions to this, please refer to the section “POSITIONING THE SEAT CORRECTLY IN THE VEHICLE”) The backrest (a) will perfectly adapt to practically any recline of the vehicle seat.

WARNING! The full surface of the backrest of the CYBEX child car seat must be against the backrest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child car seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer in this connection to our cleaning advises in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

ACTIVATING THE L.S.P.

The “Linear Side-impact Protection” system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door.

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

PLACING THE SEAT IN THE VEHICLE

Place the child car seat on the appropriate seat in the car.

- Always ensure that the entire surface of the backrest (a) of the CYBEX PALLAS M is placed fully against the backrest of the vehicle seat. The child car seat must never be in a lying position.
- If the headrest of the vehicle is in the way, pull it out all the way, turn it away or remove it completely (for exceptions to this, please refer to the section “POSITIONING THE SEAT CORRECTLY IN THE VEHICLE”) The backrest (a) will perfectly adapt to practically any recline of the vehicle seat.

WARNING! The full surface of the backrest of the CYBEX child car seat must be against the backrest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child car seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer in this connection to our cleaning advises in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

ACTIVATING THE L.S.P.

The “Linear Side-impact Protection” system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door.

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

PLACING THE SEAT IN THE VEHICLE

Place the child car seat on the appropriate seat in the car.

- Always ensure that the entire surface of the backrest (a) of the CYBEX PALLAS M is placed fully against the backrest of the vehicle seat. The child car seat must never be in a lying position.
- If the headrest of the vehicle is in the way, pull it out all the way, turn it away or remove it completely (for exceptions to this, please refer to the section “POSITIONING THE SEAT CORRECTLY IN THE VEHICLE”) The backrest (a) will perfectly adapt to practically any recline of the vehicle seat.



WARNING! The full surface of the backrest of the CYBEX child car seat must be against the backrest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child car seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer in this connection to our cleaning advises in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

EE

LV

LT

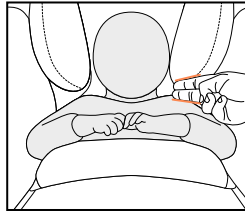
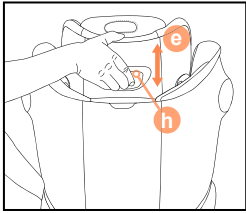


ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months.
- From the age of 25 months, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable headrest (e). To do this, pull the adjustment level (h) upwards to unlock the headrest (e).
- Adjust it so that there is space for two fingers between the lower edge of the headrest (e) and the shoulder of the child.

Note! Only an optimally adjusted headrest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M can be adjusted to one of twelve positions.

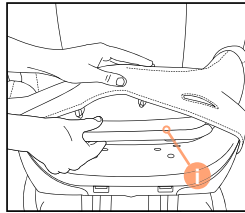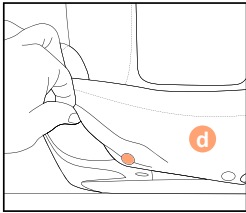

REMOVING THE ADDITIONAL SEAT INSERT

1. Release the front push buttons of the seat cover from the seat cushion (d).
2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
3. The seat insert must be removed in accordance with the age specifications stated above.
4. Restore the seat insert to its original state and fix it in place again.


ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and booster (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it rests against the child without pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

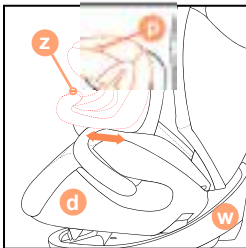

ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months.
- From the age of 25 months, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable headrest (e). To do this, pull the adjustment level (h) upwards to unlock the headrest (e).
- Adjust it so that there is space for two fingers between the lower edge of the headrest (e) and the shoulder of the child.

Note! Only an optimally adjusted headrest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M can be adjusted to one of twelve positions.

REMOVING THE ADDITIONAL SEAT INSERT

1. Release the front push buttons of the seat cover from the seat cushion (d).
2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
3. The seat insert must be removed in accordance with the age specifications stated above.
4. Restore the seat insert to its original state and fix it in place again.

ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and booster (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it rests against the child without pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months.
- From the age of 25 months, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable headrest (e). To do this, pull the adjustment level (h) upwards to unlock the headrest (e).
- Adjust it so that there is space for two fingers between the lower edge of the headrest (e) and the shoulder of the child.

Note! Only an optimally adjusted headrest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M can be adjusted to one of twelve positions.

REMOVING THE ADDITIONAL SEAT INSERT

1. Release the front push buttons of the seat cover from the seat cushion (d).
2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
3. The seat insert must be removed in accordance with the age specifications stated above.
4. Restore the seat insert to its original state and fix it in place again.



ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and booster (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it rests against the child without pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

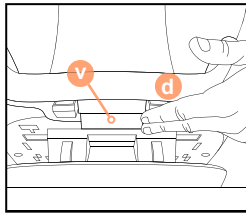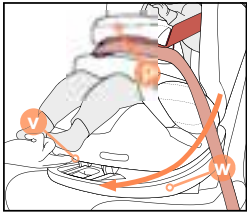

SEATED AND LYING POSITION – ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M to a lying position, the vehicle's own belt system does not need to be opened.

- If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

- To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child car seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.





RECLINING HEADREST

The reclining headrest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the headrest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the reclining headrest (r), as this is the only way that the headrest can provide optimum protection in case of side collisions.

The recline angle of the headrest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the headrest pulled back.

WARNING! Never block the locking mechanism (t) ! In the event of an accident, the recline adjustment mechanism must move smoothly, or else your child may be injured!

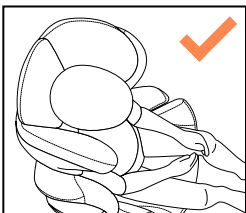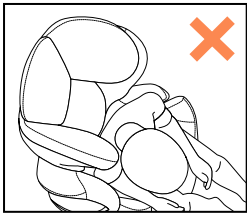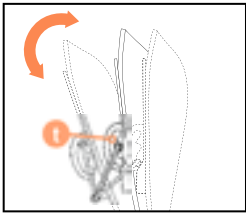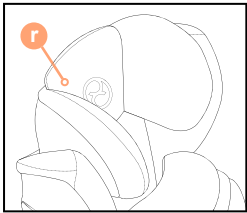

SEATED AND LYING POSITION – ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M to a lying position, the vehicle's own belt system does not need to be opened.

- If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

- To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child car seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

RECLINING HEADREST

The reclining headrest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the headrest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the reclining headrest (r), as this is the only way that the headrest can provide optimum protection in case of side collisions.

The recline angle of the headrest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the headrest pulled back.

WARNING! Never block the locking mechanism (t) ! In the event of an accident, the recline adjustment mechanism must move smoothly, or else your child may be injured!

SEATED AND LYING POSITION – ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M to a lying position, the vehicle's own belt system does not need to be opened.

- If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

- To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child car seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

RECLINING HEADREST

The reclining headrest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the headrest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the reclining headrest (r), as this is the only way that the headrest can provide optimum protection in case of side collisions.








The recline angle of the headrest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the headrest pulled back.

WARNING! Never block the locking mechanism (t) ! In the event of an accident, the recline adjustment mechanism must move smoothly, or else your child may be injured!

EE

LV

LT

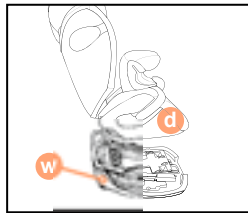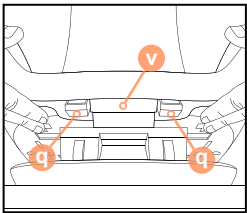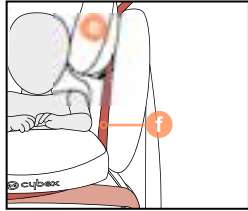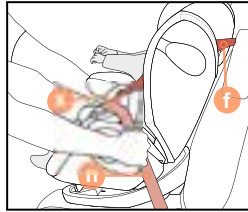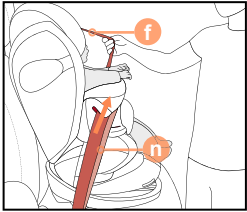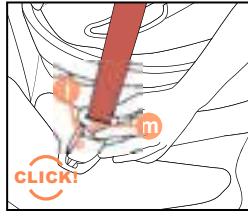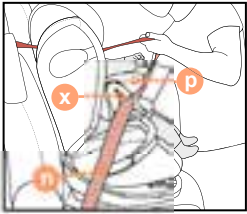

SECURING THE CHILD WITH THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

1. Now insert the previously adjusted safety cushion (p) (refer to the section “ADJUSTING THE SAFETY CUSHION”).
2. Pull out the entire length of the vehicle’s three-point belt. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child car seat.

3. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
4. Tighten the lap belt (n) by pulling the diagonal belt (f).
5. Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
7. Now feed the diagonal belt (f) tightly through the belt guide (x) of the safety cushion (p) until it is clamped inside the belt guide. Then put the diagonal belt between headrest (e) and shoulder rest. The diagonal belt does not need to be guided through the headrest belt guide for group 2/3.

SWITCHING FROM PALLAS M TO SOLUTION M (ECE GROUP 1 TO ECE GROUP 2/3)

1. Remove the safety cushion (p).
2. Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

SECURING THE CHILD WITH THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

1. Now insert the previously adjusted safety cushion (p) (refer to the section “ADJUSTING THE SAFETY CUSHION”).
2. Pull out the entire length of the vehicle’s three-point belt. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child car seat.

3. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
4. Tighten the lap belt (n) by pulling the diagonal belt (f).
5. Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
7. Now feed the diagonal belt (f) tightly through the belt guide (x) of the safety cushion (p) until it is clamped inside the belt guide. Then put the diagonal belt between headrest (e) and shoulder rest. The diagonal belt does not need to be guided through the headrest belt guide for group 2/3.

SWITCHING FROM PALLAS M TO SOLUTION M (ECE GROUP 1 TO ECE GROUP 2/3)

1. Remove the safety cushion (p).
2. Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

SECURING THE CHILD WITH THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

1. Now insert the previously adjusted safety cushion (p) (refer to the section “ADJUSTING THE SAFETY CUSHION”).
2. Pull out the entire length of the vehicle’s three-point belt. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child car seat.

3. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
4. Tighten the lap belt (n) by pulling the diagonal belt (f).
5. Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
7. Now feed the diagonal belt (f) tightly through the belt guide (x) of the safety cushion (p) until it is clamped inside the belt guide. Then put the diagonal belt between headrest (e) and shoulder rest. The diagonal belt does not need to be guided through the headrest belt guide for group 2/3.

SWITCHING FROM PALLAS M TO SOLUTION M (ECE GROUP 1 TO ECE GROUP 2/3)

1. Remove the safety cushion (p).
2. Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.








Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

EE

LV

LT

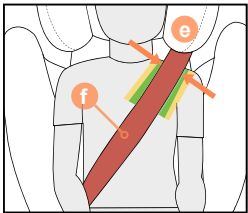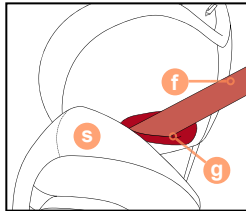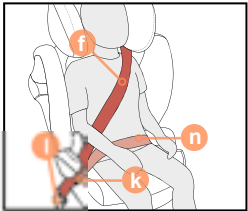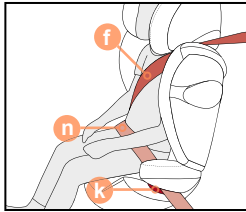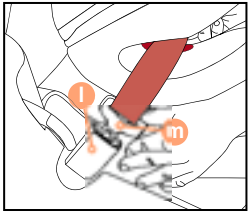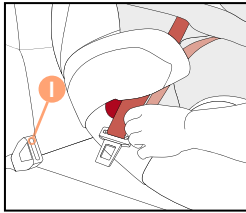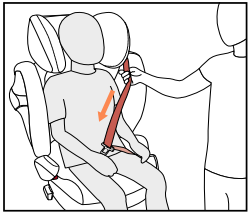

SECURING THE CHILD WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

1. Place your child in the child car seat. Pull the three-point belt right out and feed it along the belt buckle (l) in front of your child.

WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
3. Next, place the lap belt (n) in the lower belt guides (k) of the child car seat.
4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (l) must never cross the arm rest. If the belt system is too long, the child car seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child’s groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the headrest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the headrest to change the position of the belt. The height of the headrest (e) can still be adjusted while in the car.

SECURING THE CHILD WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

1. Place your child in the child car seat. Pull the three-point belt right out and feed it along the belt buckle (l) in front of your child.

WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
3. Next, place the lap belt (n) in the lower belt guides (k) of the child car seat.
4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (l) must never cross the arm rest. If the belt system is too long, the child car seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the headrest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the headrest to change the position of the belt. The height of the headrest (e) can still be adjusted while in the car.

SECURING THE CHILD WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

1. Place your child in the child car seat. Pull the three-point belt right out and feed it along the belt buckle (l) in front of your child.

WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
3. Next, place the lap belt (n) in the lower belt guides (k) of the child car seat.
4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (l) must never cross the arm rest. If the belt system is too long, the child car seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.


6. Now feed the diagonal belt (f) through the upper belt guide (g) in the headrest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the headrest to change the position of the belt. The height of the headrest (e) can still be adjusted while in the car.

EE

LV

LT

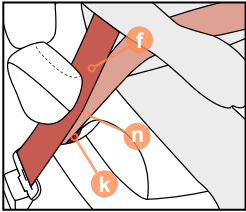

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that

- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at a recline backwards.
- the entire belt is tightly against your child's body and is not twisted.

CARE & MAINTENANCE

To ensure that your child car seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child car seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child car seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child car seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that

- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at a recline backwards.
- the entire belt is tightly against your child's body and is not twisted.

CARE & MAINTENANCE

To ensure that your child car seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child car seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child car seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child car seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that









- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at a recline backwards.
- the entire belt is tightly against your child's body and is not twisted.

CARE & MAINTENANCE

To ensure that your child car seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child car seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child car seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child car seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

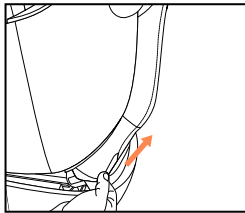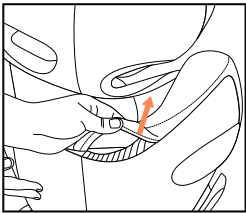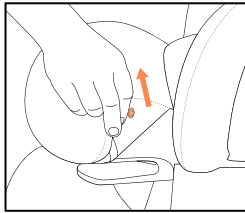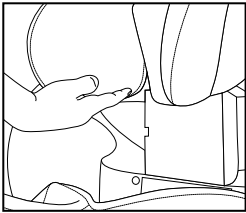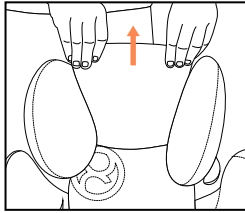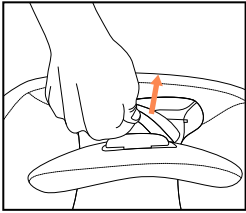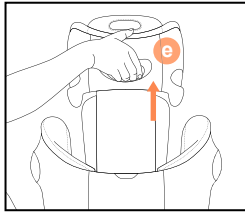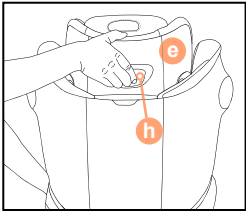

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

WARNING! The child car seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

WARNING! The child car seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

WARNING! The child car seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.





REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

EE

LV

LT

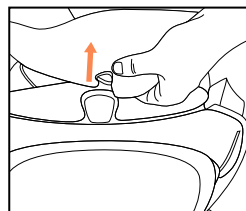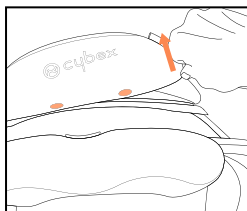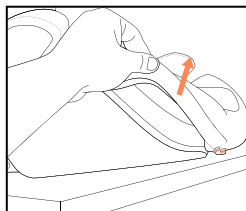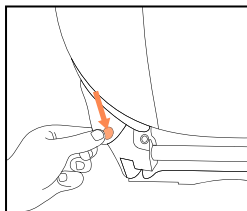


REMOVING THE COVER FROM THE BOOSTER

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

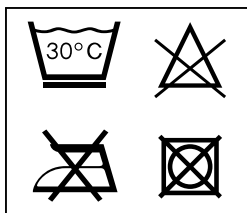

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

WARNING! Never use harsh cleaning agents or bleaches!

REMOVING THE COVER FROM THE BOOSTER

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE BOOSTER

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

WARNING! Never use harsh cleaning agents or bleaches!

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

WARNING! Never use harsh cleaning agents or bleaches!

EE

LV

LT

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child car seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child car seat must be removed from the vehicle or covered with a light cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child car seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child car seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child car seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child car seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child car seat must be removed from the vehicle or covered with a light cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child car seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child car seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child car seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child car seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child car seat must be removed from the vehicle or covered with a light cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child car seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child car seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child car seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies if the product was checked for completeness, manufacturing defects and material defects immediately upon purchase. If the product was purchased by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that originally sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

CYBEX GmbH

Riedinger Str. 18, 95448 Bayreuth, Germany
Tel.: 0921 78 511-511, Fax.: 0921 78 511- 888

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies if the product was checked for completeness, manufacturing defects and material defects immediately upon purchase. If the product was purchased by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that originally sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

CYBEX GmbH

Riedinger Str. 18, 95448 Bayreuth, Germany
Tel.: 0921 78 511-511, Fax.: 0921 78 511- 888

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies if the product was checked for completeness, manufacturing defects and material defects immediately upon purchase. If the product was purchased by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that originally sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

CYBEX GmbH

Riedinger Str. 18, 95448 Bayreuth, Germany
Tel.: 0921 78 511-511, Fax.: 0921 78 511- 888

EE

LV

LT

Dear customer,

Thank you for choosing the CYBEX PALLAS M child car seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX PALLAS M child car seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.

TR Contents

WARNING! To ensure optimum protection for your child, the CYBEX PALLAS M must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the backrest).

Note! Country-specific regulations (e.g. regarding colour-coding on child car seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg).....	2
Brief instructions Group 2/3 (15-36 kg).....	3
Certification	58
Positioning the seat correctly in the vehicle	60
Activating the L.S.P.....	62
Placing the seat in the vehicle	62
Adapting to body size	64
Removing the additional seat insert.....	64
Adjusting the safety cushion – ECE group 1 (9-18 kg)	64
Seated and lying position – ECE group 1 (9-18 kg).....	66
Reclining headrest	66
Securing the child with the safety cushion – ECE group 1 (9-18 kg)	68
Switching from PALLAS M to SOLUTION M (ECE group 1 to ECE group 2/3)	68
Securing the child without the safety cushion – ECE group 2/3 (15-36 kg)	70
Is your child correctly secured?.....	72
Care & maintenance.....	72
Removing the seat cover	74
Removing the cover from the headrest flap	74
Removing the cover from the head support	74
Removing the cover from the shoulder part	74
Removing the cover from the booster	76
Removing the cover from the safety cushion	76
Cleaning.....	76
How to act following an accident.....	78
Product service life	78
Disposal	78
Warranty conditions.....	80



Certification

CYBEX PALLAS M

Seat elevator with backrest and headrest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years



Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard

ECE R-44/04,

CYBEX PALLAS M - group 1, 9 to 18 kg

CYBEX SOLUTION M - group 2/3, 15 to 36 kg

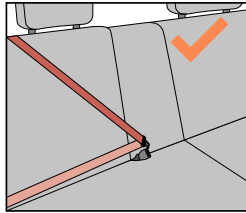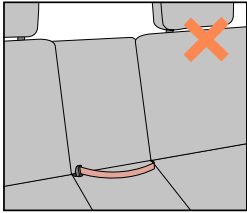

POSITIONING THE SEAT CORRECTLY IN THE VEHICLE


The CYBEX PALLAS M-FIX/PALLAS M with retracted ISOFIX Connect system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.

- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child car seat.
- Always comply with the recommendations of the vehicle manufacturer.






WARNING! The diagonal belt (f) must run back at a recline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child car seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

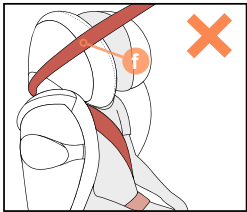

WARNING! The child car seat may not be used on car seats facing to the side of the direction of travel. Use of the child car seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle headrest must not be removed when fitting on a rear-facing seat! Even if not in use, the child car seat must always be secured with the safety belt. This applies even if the child seat has already been secured to the vehicle using the ISOFIX Connect system. An unsecured child car seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.

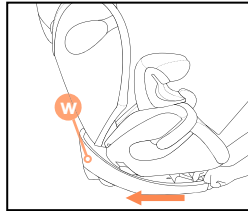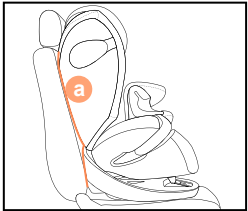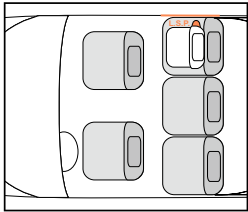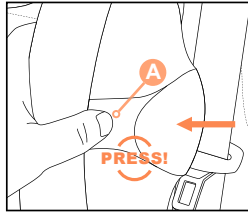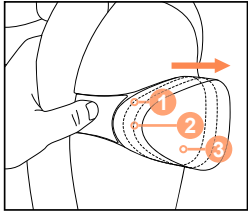

ACTIVATING THE L.S.P.

The “Linear Side-impact Protection” system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door.

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.



PLACING THE SEAT IN THE VEHICLE

Place the child car seat on the appropriate seat in the car.

- Always ensure that the entire surface of the backrest (a) of the CYBEX PALLAS M is placed fully against the backrest of the vehicle seat. The child car seat must never be in a lying position.
- If the headrest of the vehicle is in the way, pull it out all the way, turn it away or remove it completely (for exceptions to this, please refer to the section “POSITIONING THE SEAT CORRECTLY IN THE VEHICLE”) The backrest (a) will perfectly adapt to practically any recline of the vehicle seat.

WARNING! The full surface of the backrest of the CYBEX child car seat must be against the backrest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child car seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer in this connection to our cleaning advises in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

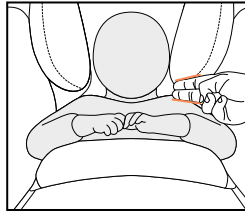
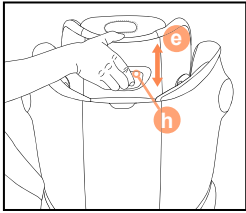


ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months.
- From the age of 25 months, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable headrest (e). To do this, pull the adjustment level (h) upwards to unlock the headrest (e).
- Adjust it so that there is space for two fingers between the lower edge of the headrest (e) and the shoulder of the child.

Note! Only an optimally adjusted headrest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M can be adjusted to one of twelve positions.

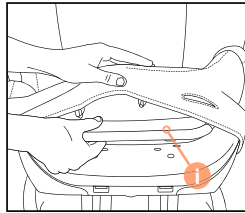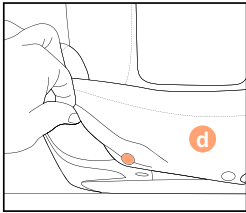

REMOVING THE ADDITIONAL SEAT INSERT

1. Release the front push buttons of the seat cover from the seat cushion (d).
2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
3. The seat insert must be removed in accordance with the age specifications stated above.
4. Restore the seat insert to its original state and fix it in place again.


ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)



By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and booster (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it rests against the child without pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

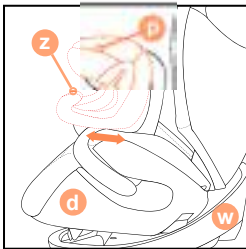

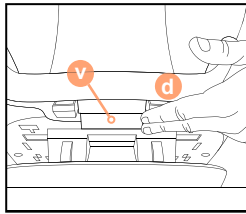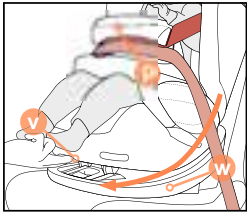

SEATED AND LYING POSITION – ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M to a lying position, the vehicle's own belt system does not need to be opened.

- If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

- To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child car seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.





RECLINING HEADREST








The reclining headrest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the headrest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the reclining headrest (r), as this is the only way that the headrest can provide optimum protection in case of side collisions.

The recline angle of the headrest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the headrest pulled back.

WARNING! Never block the locking mechanism (t) ! In the event of an accident, the recline adjustment mechanism must move smoothly, or else your child may be injured!

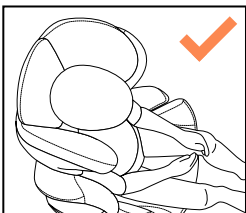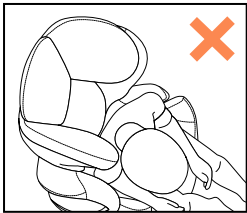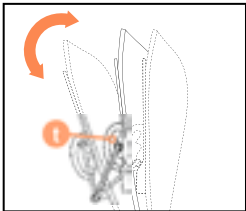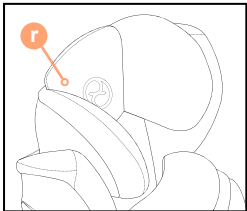

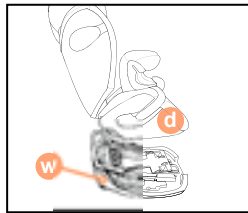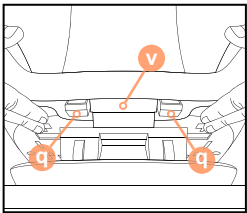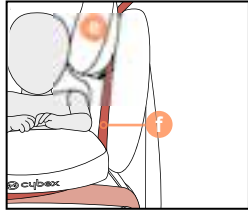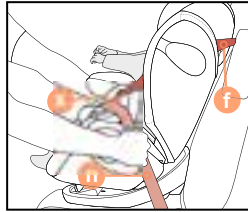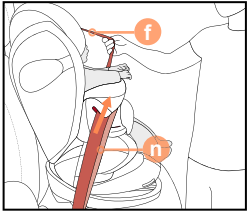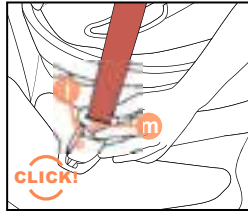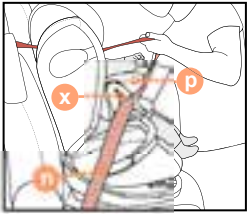

SECURING THE CHILD WITH THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

1. Now insert the previously adjusted safety cushion (p) (refer to the section “ADJUSTING THE SAFETY CUSHION”).
2. Pull out the entire length of the vehicle’s three-point belt. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child car seat.








3. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
4. Tighten the lap belt (n) by pulling the diagonal belt (f).
5. Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
7. Now feed the diagonal belt (f) tightly through the belt guide (x) of the safety cushion (p) until it is clamped inside the belt guide. Then put the diagonal belt between headrest (e) and shoulder rest. The diagonal belt does not need to be guided through the headrest belt guide for group 2/3.

SWITCHING FROM PALLAS M TO SOLUTION M (ECE GROUP 1 TO ECE GROUP 2/3)

1. Remove the safety cushion (p).
2. Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

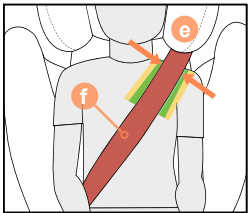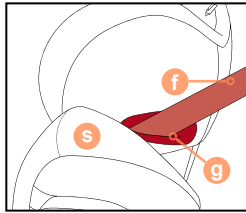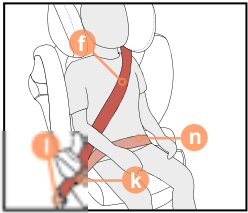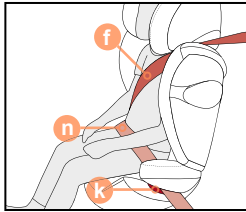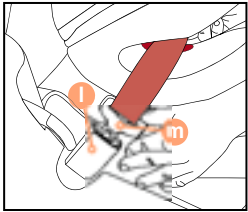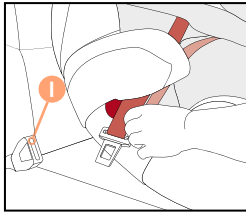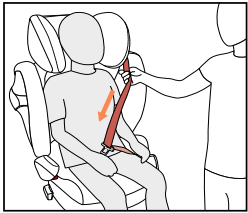

SECURING THE CHILD WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

1. Place your child in the child car seat. Pull the three-point belt right out and feed it along the belt buckle (l) in front of your child.

WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible “CLICK”.
3. Next, place the lap belt (n) in the lower belt guides (k) of the child car seat.
4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (l) must never cross the arm rest. If the belt system is too long, the child car seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.


5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the headrest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the headrest to change the position of the belt. The height of the headrest (e) can still be adjusted while in the car.

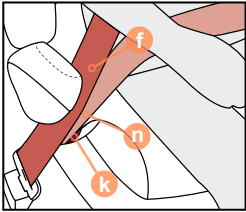

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that









- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at a recline backwards.
- the entire belt is tightly against your child's body and is not twisted.

CARE & MAINTENANCE

To ensure that your child car seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child car seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child car seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child car seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

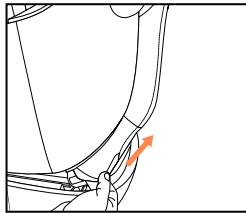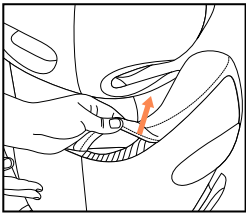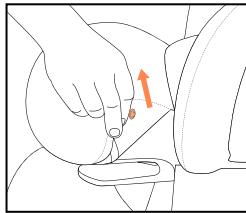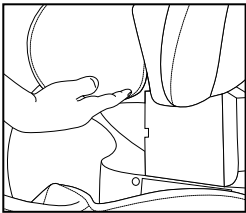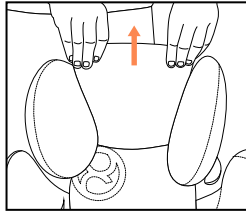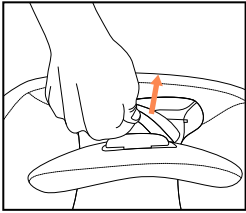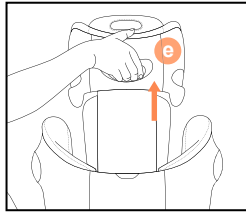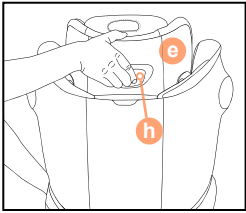

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

WARNING! The child car seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP





Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

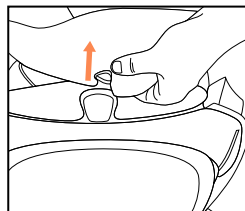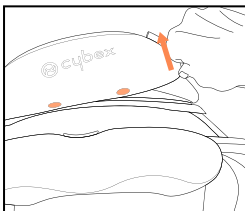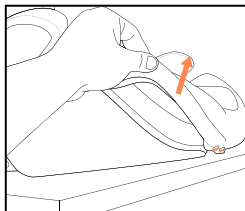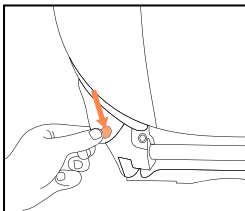


REMOVING THE COVER FROM THE BOOSTER

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

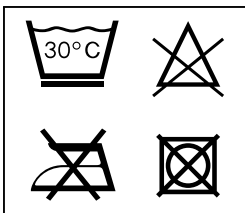

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

WARNING! Never use harsh cleaning agents or bleaches!

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child car seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child car seat must be removed from the vehicle or covered with a light cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child car seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child car seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child car seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies if the product was checked for completeness, manufacturing defects and material defects immediately upon purchase. If the product was purchased by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that originally sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

CYBEX GmbH

Riedinger Str. 18, 95448 Bayreuth, Germany
Tel.: 0921 78 511-511, Fax.: 0921 78 511- 888

